

# Standard 13" Fieldgate Hooks to Bolt -19mm Pin

Heavy Duty. Ideal for Timber or Concrete posts.



# **Adjustable Bottom Gate Fittings**

Used at the base of gate hinge side for placing and positioning hanging gates.





No.167AB

## **Hooks to Build**

Designed to use in brick piers and cementing into masonry.





### **Traditional Garage Door Drop Bolts** Used to secure joining points of gates together.

Fieldgate Lock through Hook to Bolt

Designed to stop hook twist and movement.



No.260/TRAD

# **Heavy Fieldgate Hinge Sets**

Suitable for 75mm (3") Timber Gates.

Supplied with fixings



fixed to either timber, masonry or concrete posts.



### Hooks on 4" x 4" Plates with Extended Shoulder


Heavy Duty Hook on Plate to suit Field Gate double Bands. Enables gate to be lifted on or off for maintenance purposes.





## **Traditional Cast Cabin Hooks**

For use on external and internal doors, sheds and gates.

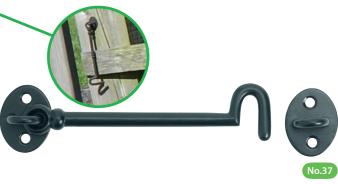

# **Adjustable Bottom Fieldgate Hinge Sets**

Suitable for 75mm (3") Timber Gates. Enables easy adjustment of the gate once in situ.


Supplied with fixings



# **Adjustable Bottom Fieldgate Hinge Sets with** 4" x 4" Plates

Suitable for 75mm (3") Timber Gates. Ideal for DIY.

Supplied with fixings

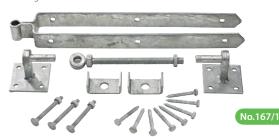



Suitable for 75mm (3") Timber Gates. The 4" x 4" hooks on the square plates can be

